

C5 Tail Light Seal Instructions

Tools needed:

- T-15 Torx bit (you may be able to use a small flat head screwdriver if you don't have the Torx bit)
- Lubricant – Can be a soapy water compound, silicone grease or hand lotion.

- 1) Remove Torx screws from each taillight (2) for each light.
- 2) You may either leave the lights attached to the car or take it off and work on it at a work bench .Clean the edges of the tail light with alcohol pads or window cleaner.
- 3) ****READ THIS FIRST BEFORE YOU INSTALL**** you want the bigger (thicker) side of the seal facing OUT and the thin side facing the front of your car (into the bumper as If looking at the light installed back into the car)



- .Peel the adhesive backing (yellow strip) off the seal. Starting at the top of the taillight, gently press the seal onto the tail light all the way around the perimeter.
- 4) All 4 lights should be done now
 - 5) Take a very small amount of lubricant you have selected and apply it all around the outer edge of the seal (this is a very important step because

without the lubricant, installation of the taillight will be very difficult and may cause shifting of your seal, thus preventing it from performing its duty)

- 6) Gently slide the tail light back into the bumper and screw in the Torx screws. Repeat for each tail light.
- 7) Wash hands and enjoy not having the Corvette drip every again!!!!

Thank you for your purchase and enjoy!

Greg Sanders

Sales@GSc creationsLLC.com

www.GSc creationsllc.com

