## C5 Corvette Door Panel Window and door Lock switch LED KIT


Tools needed: Small flat head screw driver.

#### Driver's side:

1) Insert your screw driver into the bottom of the switch at the angel shown in the picture below. (You may wish to wrap the screw driver or put something between the door and your screw driver do you don't damage the door)





2) Lift up and remove the switch from the door. Flip it over to expose the 4 stock lights you are to remove next.

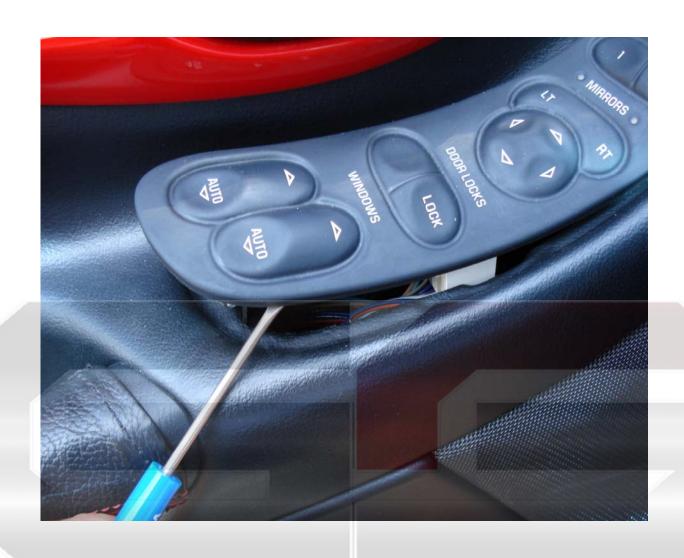

# GSCREATIONS




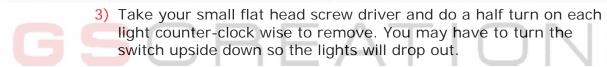

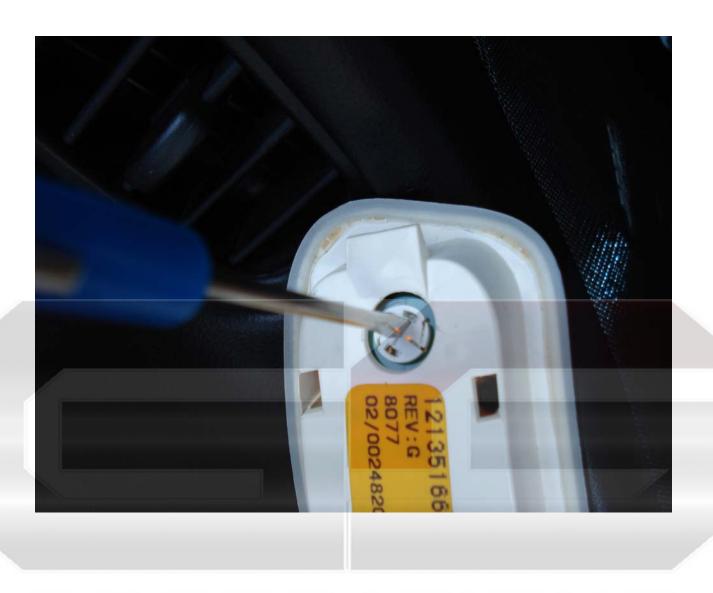

## GSCREATIONS

4) Take your new LED's and drop them into each hole, half turn them close-wise to secure. If any of the LED's do not light up as you install them simply take it out and turn it around, it will only work when installed one way.

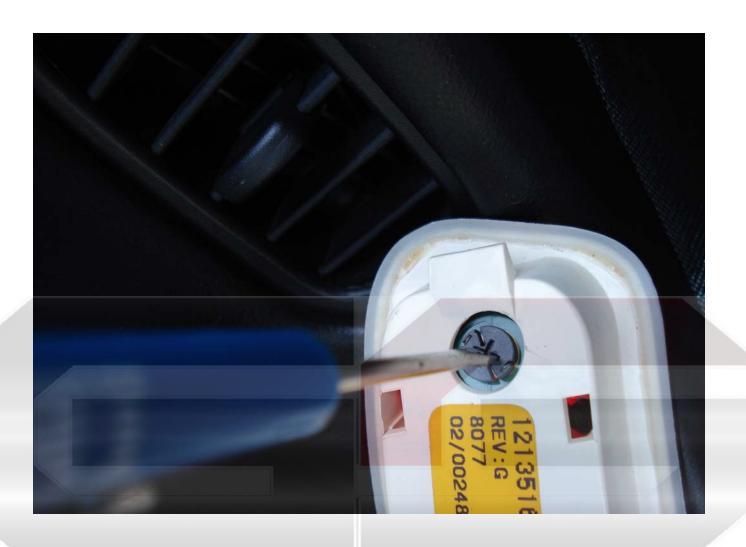


5) Once all 4 LED's are lit you may reinstall the switch by first inserting the top section then pushing down.

### GSCREATIONS




## Passenger's side:

1) Insert your screw driver into the top of the switch at the angel shown in the picture below. (You may wish to wrap the screw driver or put something between the door and your screw driver do you don't damage the door)

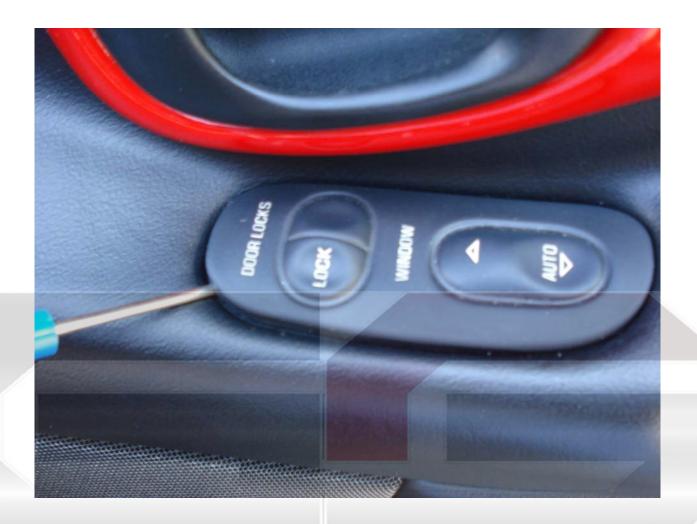

- 2) Lift up and remove the switch from the door. Flip it over to expose the 2 stock lights you are to remove next.
- 3) Take your small flat head screw driver and do a half turn on each light counter clock wise to remove. You may have to turn the switch upside down so the lights will drop out.

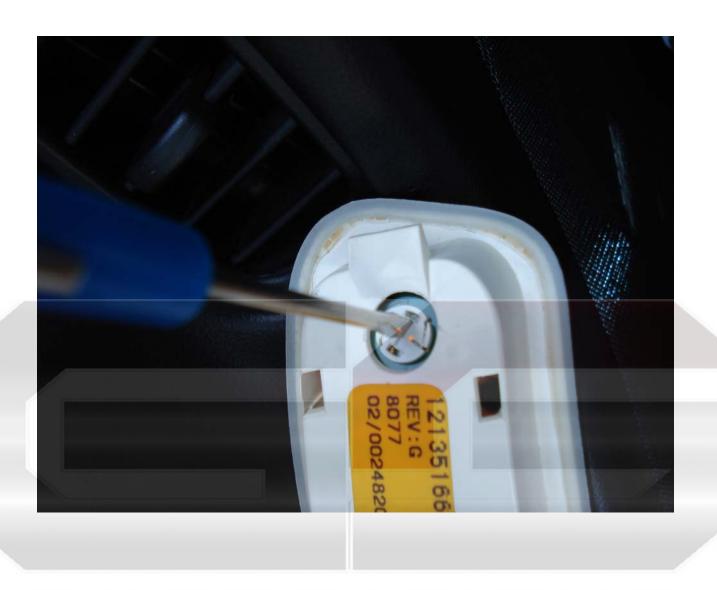


## GSCREATIONS

4) Take your new LED's and drop them into each hole, half turn them closewise to secure. If any of the LED's do not light up as you install them simply take it out and turn it around, it will only work when installed one way.



6) Once both LED's are lit you may reinstall the switch by first inserting the bottom section then pushing down.

#### GSCREATIONS

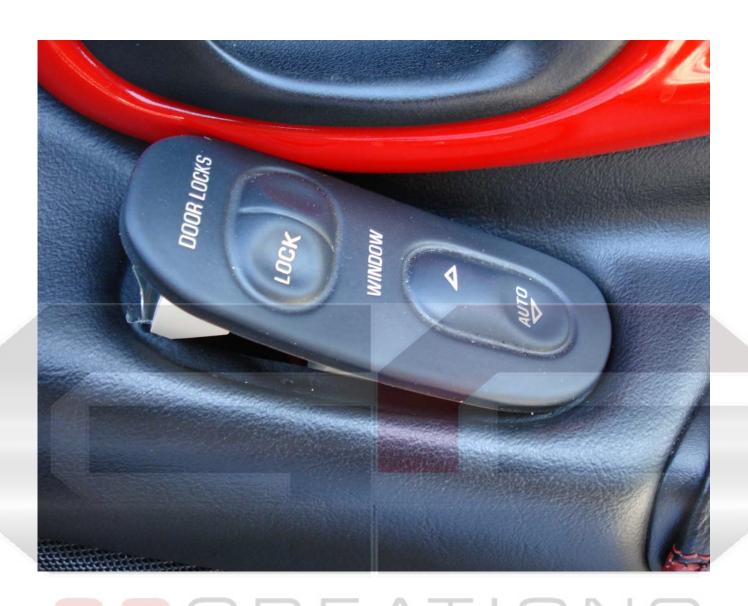

Thank you for your purchase and enjoy!

Greg Sanders

Sales@GScreationsLLC.com

GScreationsllc.com