


2005-2013 C6 Corvette Base Model Driving / Fog Light Blackout Instructions

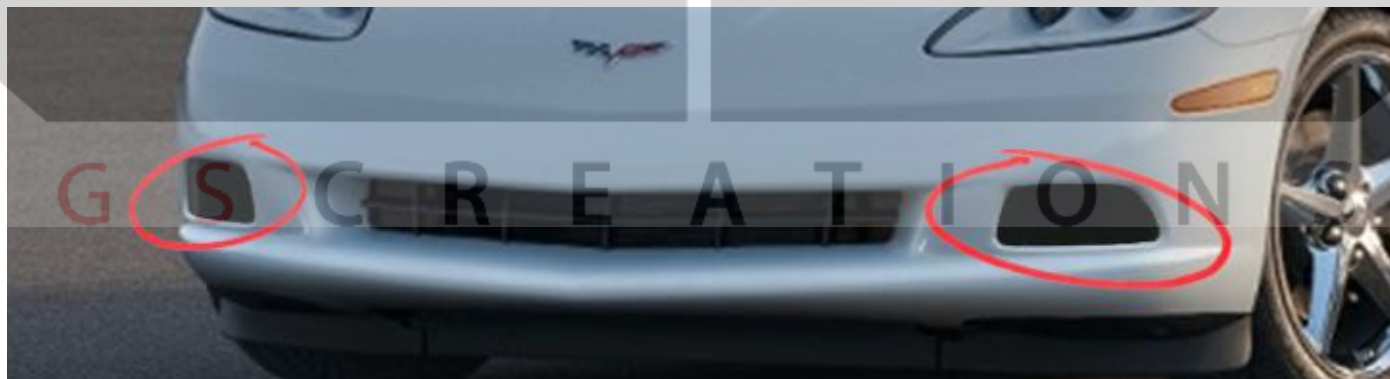

- To install these blackouts you simply need to press them into place. They are slightly larger than the body cutout for the lens by design. They are 1/16" thin which will allow them to conform to the shape of the light.
- Clean the light thoroughly with alcohol to ensure your new lens will adhere properly. Allow light to dry for 1-2 minutes.
- Peel the red backing from the 3M tape.
- Take the cover and slide it either side in first until it fits between the lens and the body of the car. Make sure to keep the tape from touching until you get the cover into place. Slide cover into place so it covers all of the light
- Now press the cover into place and keep pressure for one minute.
- Repeat this step on the other side.

Thank you for your purchase, please enjoy the new look!

GSc creations

G S CREATIONS