## C6 Corvette Under-hood LED Light Kit

## **Tools needed:**


- 10mm socket
- 13mm socket
- Extension
- Socket wrench




1) Start off by cleaning the areas in the below picture marked with the color red with the supplied alcohol pads, let that dry for 3-4 mins. Along the sides of the fenders and the bottom part of the firewall weather-stripping (this is where the LED strips will be installed) the green lines are where you can route the wires connecting the LED strips. (Click <a href="here">here</a> to see better pictures of the two areas where you need to clean)



- 2) Next lay out the LED strips in their locations but don't yet install them with the attached 3m tape. Clean the rear of the fuse box with the supplied alcohol pads; mount the wireless controller to the back of the fuse box that you just cleaned.
- Remove the negative cable from your battery, before doing any of the below work.
- 4) Remove the fuse box lid. Power the wireless unit by removing the 13mm bolt from the pictured area and attach the positive wire from the wireless unit marked with RED. If you have a Z06, Zr1 or GS model, you can use the ground location we have marked with the green circle. If you have a standard C6 you can connect the ground from the wireless unit to the battery or another grounded location. Use the supplied zip ties to hold the new wires in the loom to the loom that is already in your Corvette.

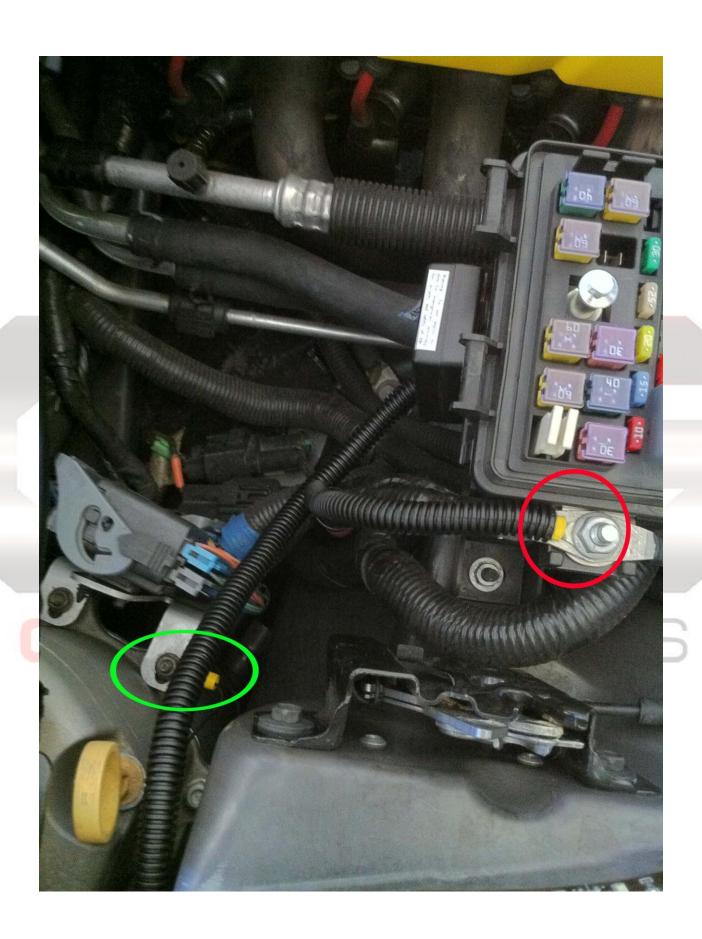


5) Now you are ready to mount your LED strips, once you spaced them out to your liking remove the 3m tape backing from each strip and stick on to the bottom of the rear firewall weather stripping, and along the inner side fenders (see the RED line in the picture below on where to mount the strips to on the side fenders) (The green line is where you are mounting the strip to the rear weather-strip)

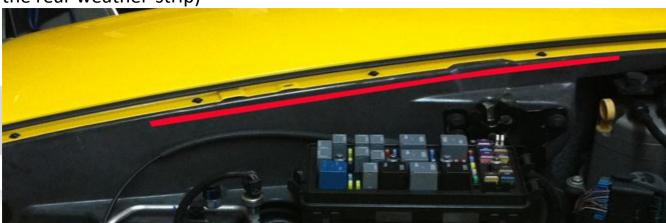




6) You can pull away the rear weather stripping to hide the wires if you would like (See below)

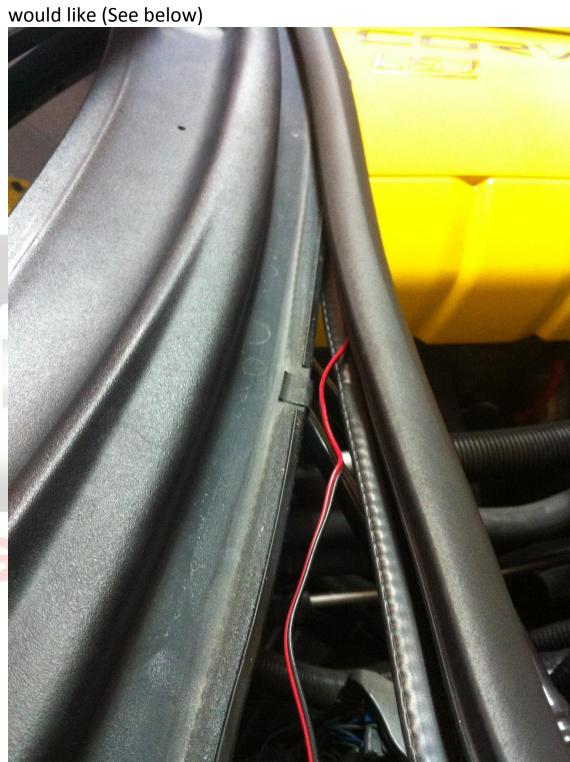

7) Once you have mounted all the LED strips, and have both the negative and positive wires connected from the wireless box, connect back your negative terminal to your battery and test out your new LED strips by using the remotes on button. You are all done, wait for dusk or your nighttime car show and go show off your new LED's!

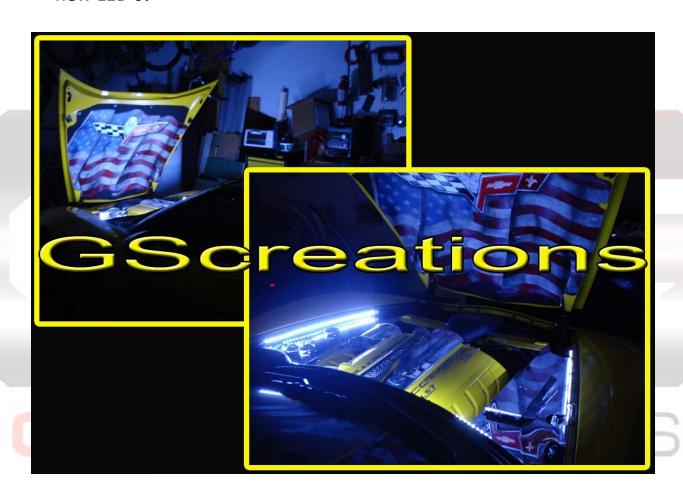

Thank you for your purchase and enjoy!
Sales@GScreationsLLC.com
GScreationsllc.com